


Imager DCM v3.2 : Video converting software User Guide

Note:

- ***You may use the remote control to select the mode that you want to use, the button on the remote is AV/INPUT***
- ***If you using RCA cable from the front of the player, please select AV1, when using Camcorder***
- ***If you using RCA cable from the back of the player, please select AV2, when using Camcorder***
- ***If you using it as a VCR player select “VCR” on the remote or using the button on the player “DVD/VCR”***
- ***You may want to connect all the necessary hardware to the system before you launch the application***

1. Click on the Imager DCM V3.2 Icon, as the picture shown below.

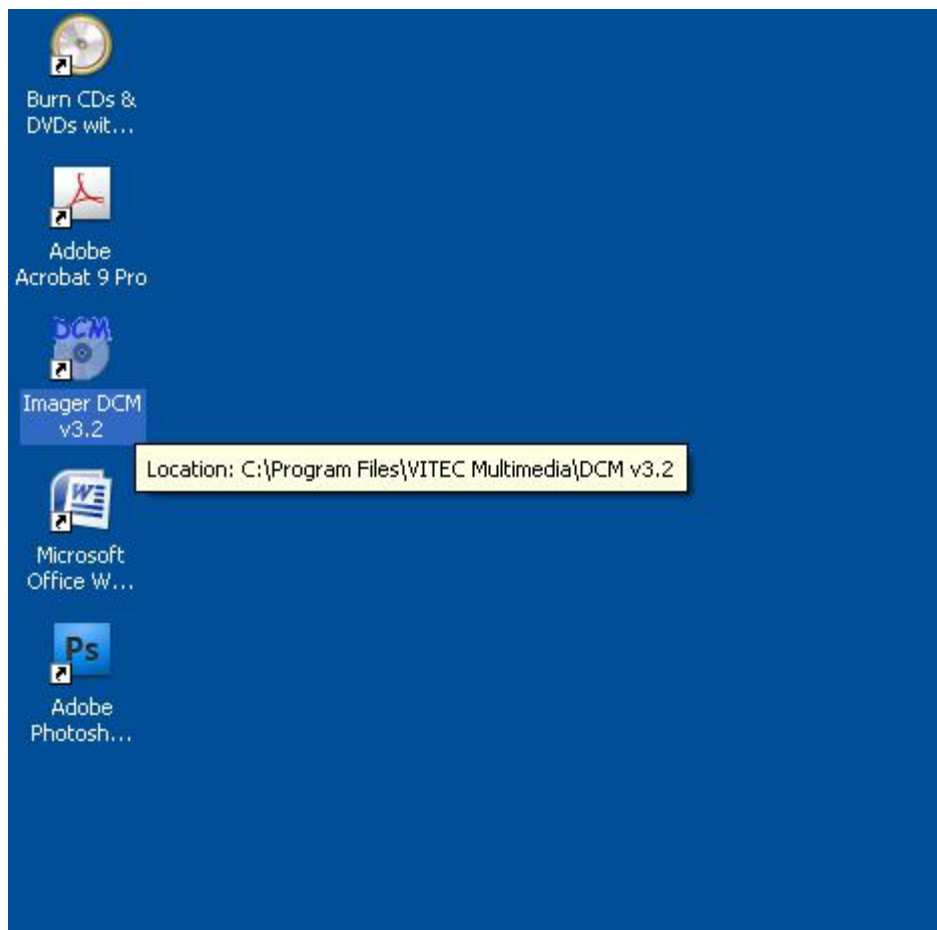

2. The application will launch, as the picture shown below.



3. Click on the film like button as circle in red, shown in the picture below.




4. With the DVD or VCR player power on, you will see the picture as shown below.



5. Use the remote controller to select VCR for video tape conversion.
6. You may also use the button on the player “DVD/VCR” to select the mode also.
7. Click on the “Save” button, circle in red, shown in the picture below.



8. The following window will pop up, as shown in the picture below.

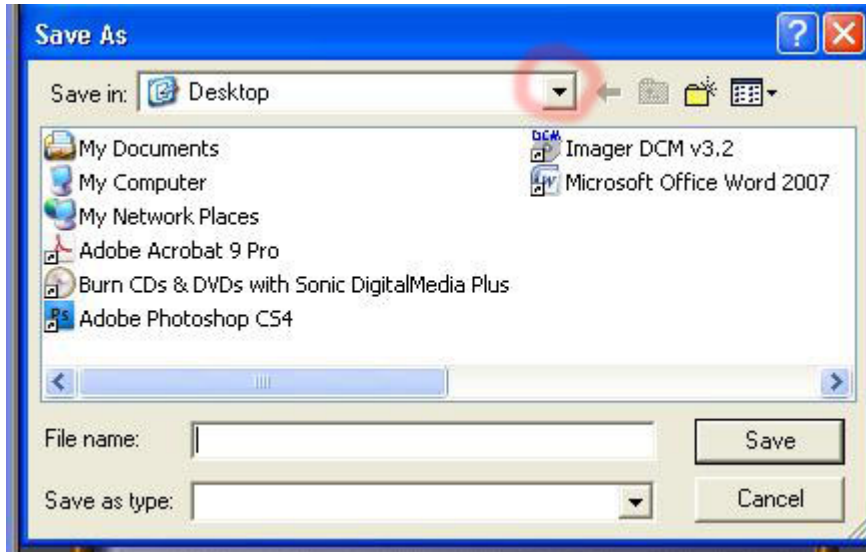

9. Chose a location you want the file to be saved in, by clicking on the drop down box, circle in red as shown above.

10. In the "File name:" box, enter the name that you want to save the file.

11. In the "Save as type:" box, leave it blank.

12. Use the remote control to play the video tape.

13. Click on the “Red” record button, circle in red as shown in the picture below, to start recording.



14. The video will be recorded, and a file by the name that you have specify at steps: 9, will be created at the location that you have specify at steps: 8.
15. Click the “Yellow Stop button”, circle in red as shown in the picture below to stop the recording once the video ends.

